

Xiamen Rizheng Industry Co.,Ltd

Salad Spoon & Fork Kits Assembly Instructions

Required Accessories

- Drill bit: 7mm
- Glue (Epoxy)
- Sanding and finishing supplies
- Blank size: Approximately 1-1/2" x 1-1/2" x 7" long



BLANK PREPARATION

The blank size will vary based on the profile of your design.

Generally, the size of your wood or acrylic blank should approximately 1-1/2" x 1-1/2" x 7" long. Mark the center of the blank on the end. Using a medium drill speed, drill a 7mm diameter hole x 27mm deep.

Diagram A - Parts and Assembly




TURNING SALAD SPOON & FORK

Set up the blank between centers as shown in Diagram B.

Turn the blank to your own profile design. Sand with abrasives and finish with your choice of polish.

Diagram B - Turning the Handle

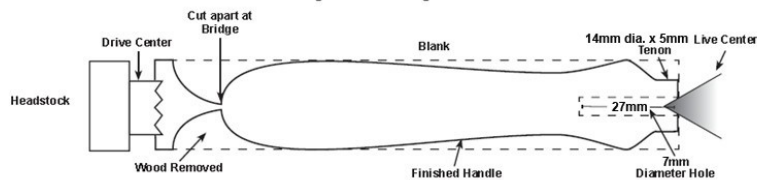

ASSEMBLY

Using epoxy when assembling the salad spoon & fork. Spread epoxy over the spoon & fork shaft. (Be sure not to get any epoxy on the spoon & fork or exposed spoon & fork post.) Insert the spoon & fork shaft into the trim ring and then into the turned material to secure. When dry, the salad spoon & fork is ready to use.